


## Fleck 3600 Time Set - Frequency of Regeneration - Extra Regeneration

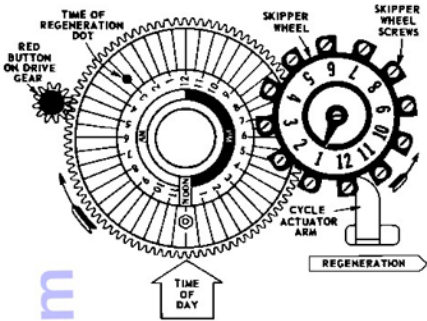

### SETTING THE TIME AND FREQUENCY OF REGENERATION Fig. 2

Simple with "UP FRONT" Controls.

**Frequency or Regeneration:** every day, every 12th day or anything in between.

- Turn the skipper wheel counter-clockwise until No. 1 is at the red arrow.
- Set screws on the skipper wheel all the way *in* on days regeneration is desired and screwed *out* so they do not contact the cycle actuator arm on days when regeneration is not required.

**Time of Regeneration:** Your Choice.

Turn the dial with time-of-day numerals in either direction until the time you have chosen for regeneration is in line with the dot on the large gear.


**Time of Day:**

- Press and hold in the red button to disengage the drive gear.
- Turn the large gear until the actual time of day is at the time-of-day arrow.
- Release the red button to re-engage the drive gear. Now the time of day on "clock" has been set.

### HOW TO TRIGGER AN EXTRA REGENERATION

You can start a regeneration cycle manually at any time, by pushing the cycle actuation arm to the right momentarily. The Model 3600 will then automatically go through a *full* regeneration cycle.

www.idealh2o.com

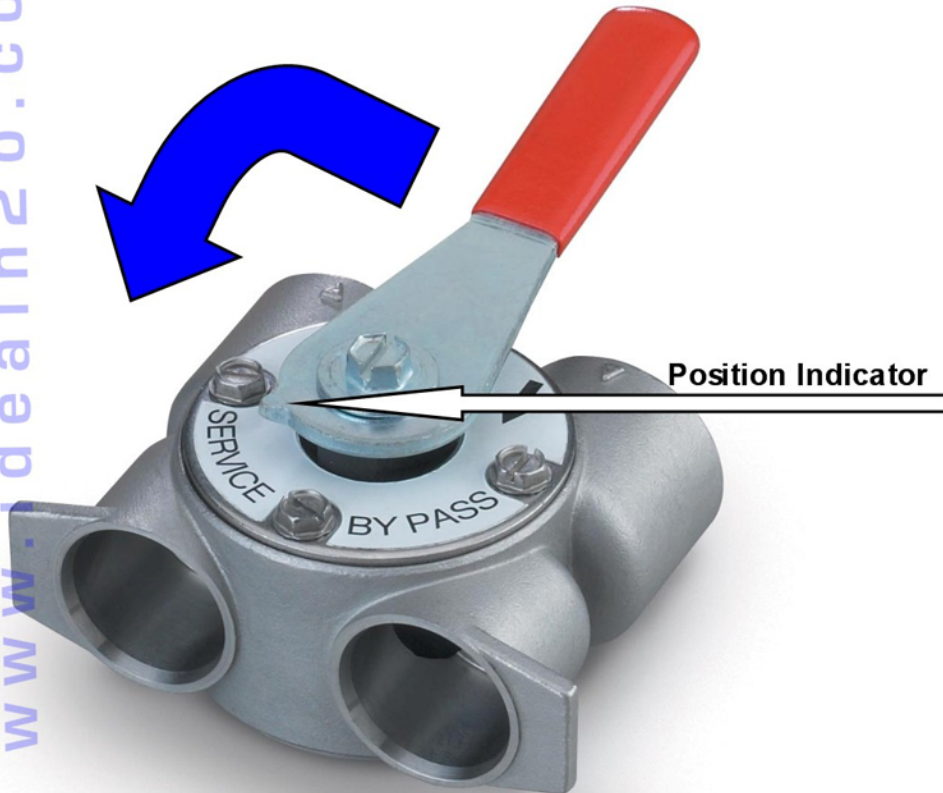

**Pull the red handle in the direction of the blue arrow. The position indicator will then point to BYPASS. This bypass may be in a vertical or horizontal position.**