

Figure 1

### Time of Day Setting


With the jumper on the set of pins next to the word **TIME** (Figure 2), set the time of day to the closest hour by pressing the black **TIME SET BUTTON**. PM hours are indicated by a light next to the letters **PM** on the display window.

**Note:** The use of a small needle nose pliers or tweezers will aid in moving the jumper.

**Note:** The unit is factory set to regenerate at 2 AM.

If you prefer to have the unit regenerate at an earlier or later time, simply set the current time of day accordingly. To have the unit regenerate at 4 AM, 2 hours later, set the clock 2 hours earlier than the actual current time.

**BYPASS:**  
To bypass the conditioner: rotate both of the handles clockwise so they are both perpendicular to the flow path or the inlet and outlet water stream, as shown below.

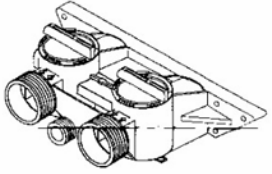

To return to the conditioned water or in service position, rotate the handles counterclockwise so they are parallel to the flow path of the inlet and outlet water stream, as shown below.

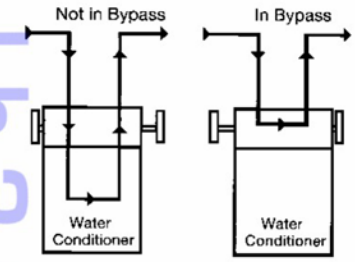
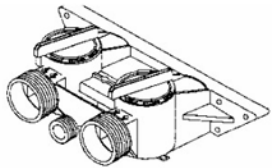


Figure 1 Autotrol Series 156 Bypass Valve  
Not in Bypass      In Bypass

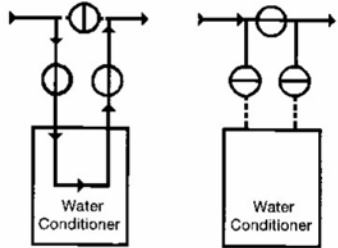


Figure 2 Typical globe valve bypass system