

Pull the red handle in the direction of the blue arrow. The position indicator will then point to BYPASS. This bypass may be in a verticle or horizontal position.