


If the date and time are incorrect, press the **Day and Time** button to update to the correct day and time. The Day and Time screen appears.

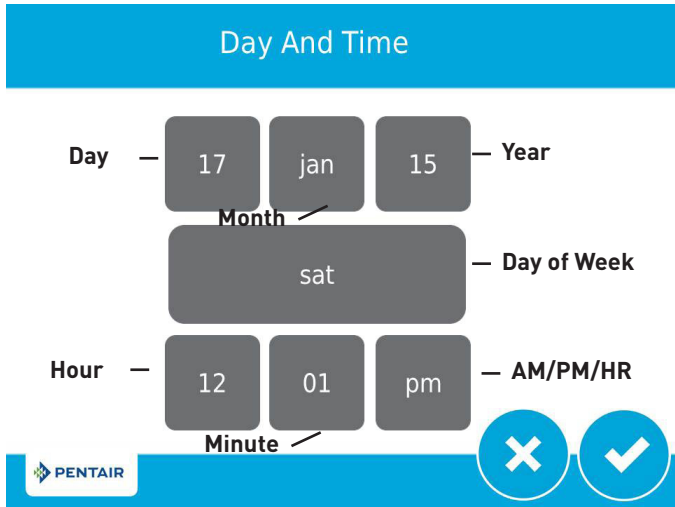

Day and Time Screen

Press the **Day of Week**, **Hour**, **Minute**, and **AM/PM/HR** buttons to adjust the values to the correct day of week and time. Setting the value of the **AM/PM/HR** button to HR changes the display to a 24 hour clock. Press the **Day**, **Month**, and **Year** buttons to adjust the values to the correct date. Press the button when finished to return to the Home screen. Press to return to the Home screen without saving.

Onyx Bypass - Service Position



Turn each of the handles counter clockwise.



Onyx Bypass - Bypassed Position